
UROVO



SR5600 Wireless Pocket Scanner Quick Start Guide

3.01.200.12563

SR5600 Overview

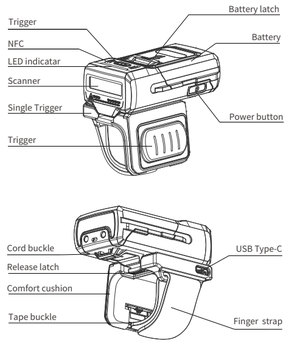


Packing List

- Device x 1
- Battery x1
- Data cable x 1
- Charger x1
- Single Trigger x1
- Quick Start Guide &Warranty Instructions & Certificate of Conformity x 1

Battery Replacement

Install the battery

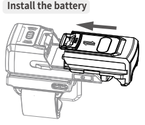

Step 1: Slide the battery toward the top of the device.




Step 2: Gently press the slide lock to secure the battery to the device, completing the battery installation.

Remove the battery



Step 1: Gently press the slide lock to unlock the battery from the device.



Step 2: Slide the battery block outward to complete the battery removal.

Charging Instructions

Plug the Type-C data cable into the trigger interface of SR5600, and supply power through the adapter. The LED status indicator of the SR5600 is red, indicating that it is charging.



Trigger assembly

The SR5600 is worn on the index finger and triggered by the thumb. By adjusting the installation method of the trigger, it can be used on either the left hand or the right hand.

Install the Trigger



Step 1: Align the trigger with one end of the device latch.



Step 2: Slide the lock inward while gently pressing down on the trigger to complete the installation.

Remove the Trigger



Step 1: Push the sliding lock inward to release the latch.



Step 2: Lift the trigger upward to complete the disassembly.

Use on the Left-hand



Use on the Right-hand



Getting Started

Power On

After installing the battery, Press and hold the power button of the SR5600 until the SR5600 emits a prompt sound, then release the power button.

Bluetooth Connection

1. Tag to Pair: Align the NFC icon on the SR5600 with the NFC antenna area on the host device to establish a pairing connection.

2. Scan to Pair: Use the SR5600 scanning host device to generate the pairing barcode and establish the pairing connection.

3. Search to Pair: Search for SR5600 in the Bluetooth list on the host device and establish a pairing connection. (SR5600 Bluetooth Name: SR5600-XXXX, where xxxx represents the last four digits of the SR5600 Bluetooth MAC address.)

Notes: After the connection is established, the SR5600 will emit a beeping sound, and the blue status indicator will remain constantly on.

Power Off

Press and hold the power button of the SR5600 until the SR5600 emits a prompt sound, then release the power button.

Status Indication

Description	LED Indication	Beep Indication
SR5600 Power On	Red (about 3 sec)	Power On beep
SR5600 Power Off	None	Power Off beep
Bluetooth not connected	Blue flash	None
Bluetooth connection established	Blue	High Middle Low
Bluetooth disconnected	Blue flash	Low Middle High
Decoding successful	Green single flash	1 x Middle beep
Transmission error	Red single flash	4 x middle beeps
Battery is charging	Red	None
Fully charged	Green	None
Scan the setting barcode, Settings applied	Green single flash	2 x High beeps
Scan the setting barcode ,settings failed	Red single flash	2 x low beeps

Table of Toxic and Hazardous Substances and Content in this product

Part	Toxic and hazardous substances or elements					
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Host	X	O	O	O	O	O
adapter	X	O	O	O	O	O
USB cable	X	O	O	O	O	O

O：This symbol indicates that the content of this toxic or hazardous substance in all homogeneous material is under the limit specified in the SJ/T11363-2006

X：This symbol indicates that the content of this toxic or hazardous substance in at least one homogeneous material exceeds the limit specifed in the SJ/T11363-2006; however, the exceeding toxic or hazardous substance in the part with a "x" cannot be solved for there is no mature technology can be used.

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

Battery Information

Caution:

1. Risk of explosion if battery is replaced by an incorrect type. Dispose of batteries according to instructions.
2. However, there are limitations as to how long a battery can operate or be stored before needing replacement. Many factors affect the actual life cycle of a battery pack such as heat, cold,harsh environmental conditions, and severe drops.
3. When batteries are stored over six months, some irreversible deterioration in overall battery quality may occur. Store batteries at half of full charge in a dry, cool place, removed from the equipment to prevent loss of capacity, rusting of metallic parts, and electrolyte leakage. When storing batteries for one year or longer, the charge level should be verified at least once a year and charged to half of full charge.
4. Replace the battery when a significant loss of run time is detected.

Battery Safety Guidelines

1.The area in which the units are charged should be clear of debris and combustible material or chemicals. Particular care should be taken where the device is charged in non-commercial environment.
2. Follow battery usage, storage, and charging guidelines found in the user's guide.
3.Improper battery use may result in a fire, explosion, or other hazard.
4. To charge the mobile device battery, the battery and charger temperatures must be between 5˚C and +40˚C.
5.Do not use incompatible batteries and chargers.Use of an incompatible battery or charger may present a risk of fire, explosion, leakage, or other hazard.
6.For devices that utilize a USB port as a charging source, the devise shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
7. Do not disassemble or open, crush, bend or deform, puncture, or shred.
8.Severe impact from dropping any battery-operated device on a hard surface could cause the battery to overheat.
9. Do not short circuit a battery or allow metallic or conductive objects to contact the battery terminals.
10.Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire explosion, or other hazard.
11. Do not leave or store the equipment in or near areas that might get very hot, such as in a parked vehicle or near a radiator or other heat source.Do not place battery into a microwave oven or dryer.
12.Battery usage by children should be supervised.
13.Please follow local regulations to promptly dispose of used re-chargeable batteries.
14.Do not dispose of batteries in fire.
15.Seek medical advice immediately if a battery has been swallowed
16.In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes.If contact has been made, wash the affected area with large amounts of water and seek medical advice

Precautions

1. Read all information in this guide before using the device to ensure safe and properoperation.
2.Please use the accessories that have been approved by this manufacturer and corresponds to this model. Use of any power source, charger, battery, etc.that has not been approved by this manufacturer may cause a fire,explosion, or other hazards.
3.Please use device and accessories within the specified temperature range.Equipment failure may occur when the ambient temperature is too high or too low.
4.Do not disassemble the product and its accessories.If the equipment or any of its components are not working properly, consult the after-sales service of the company promptly, or send the equipment to the after-sales service outlet for testing and maintenance.
5.The batteryis made from a flammable and explosive material. Do not disassemble,squeeze, drop and make any other destructive operations on the battery. Do not place the battery in high temperatures.
6.Disposal ofused batteries is subject to local relevant documents or policies regarding disposal of used batteries.

Warranty Policy

Thank you for using SR5600 Wireless Pocket Scanner. In the situation of quality problems, which arise from raw materials or production processes, during normal use of purchased products,the seller will be responsible for free maintenance within one year from the date of purchase.The company may provide repairs due to the user's failure to use the product according to the provided instructions of the product. However corresponding service fee and component fee will be charged.

Warranty regulations:
1. Under normal circumstances, the warranty period of the device is 12 months (3 months for accessories), subject to the sales agreement.

2. During the product warranty period, under the normal use conditions(determined by our technical staff), the user will be entitled to a free warranty for damaged or faulty warranty parts.

3. During the warranty period, faults caused by repair , disassembly or modification of the product by a personnel other than our company improper installation, improper use by the user (failure to follow instructions), serial number damage, accident or natural disaster, will not be covered under the warranty.

4. Please show the equipment SN and purchase certificate for repair.The company reserves the right to interpret the above contents.

Place of Origin: Zhu Hai Quality Inspector: 02

UROVO TECHNOLOGY LTD.
Website: en.urovo.com

UROVO

Note: The contents of the manual are subject to change without prior notice.